



Electro Optical Components, Inc.


5464 Skylane Boulevard, Suite D, Santa Rosa, CA 95403

Toll Free: 855-EOC-6300

www.eoc-inc.com | info@eoc-inc.com




External Control of SOM-1 Working Frequency

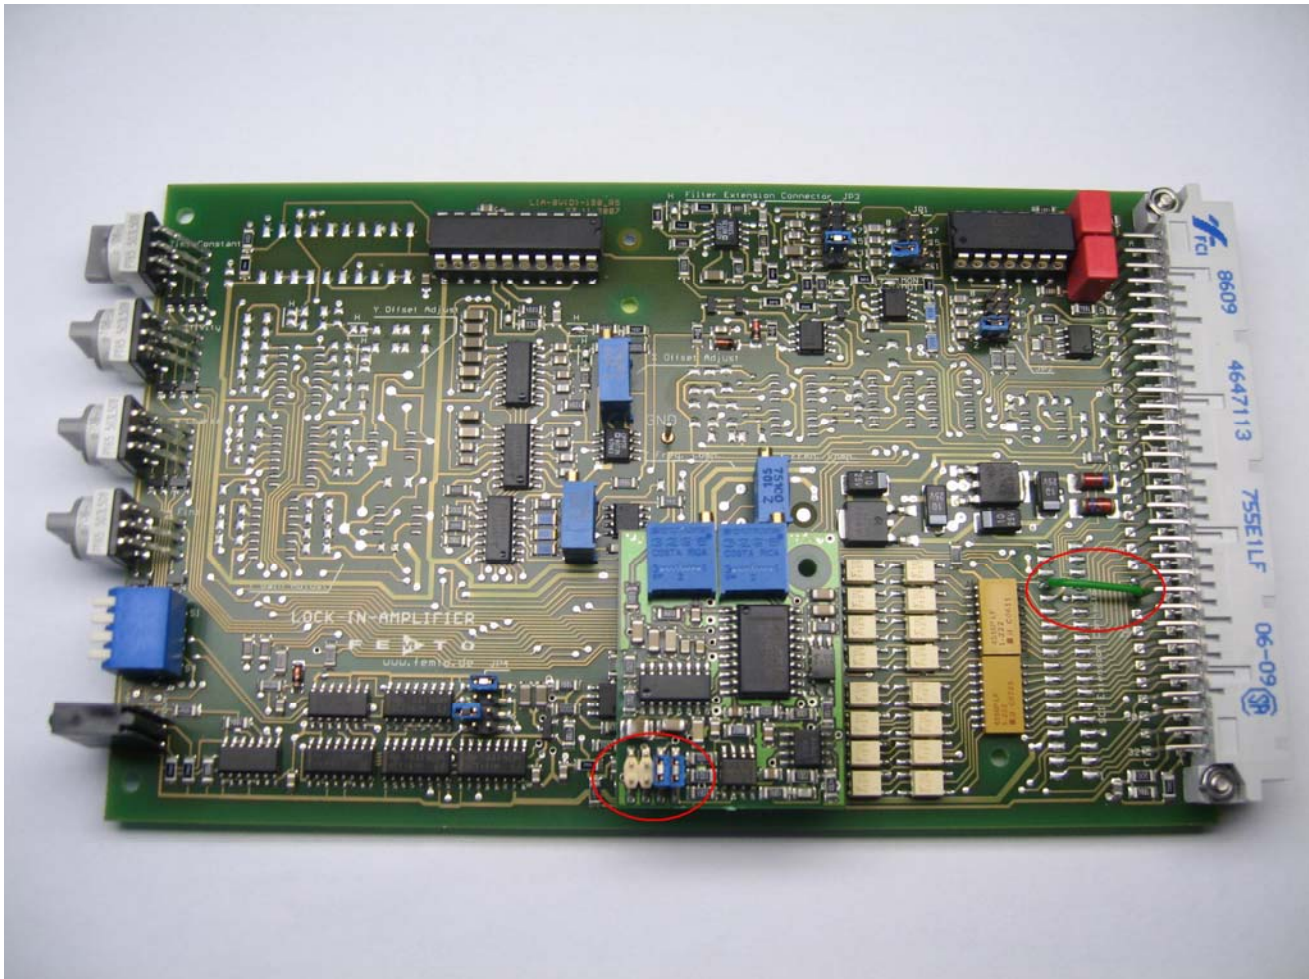


For external control of the SOM-1 working frequency 2 changes are necessary (marked with red circles):

- change of the jumpers on the SOM-1 board
- additional wire connection

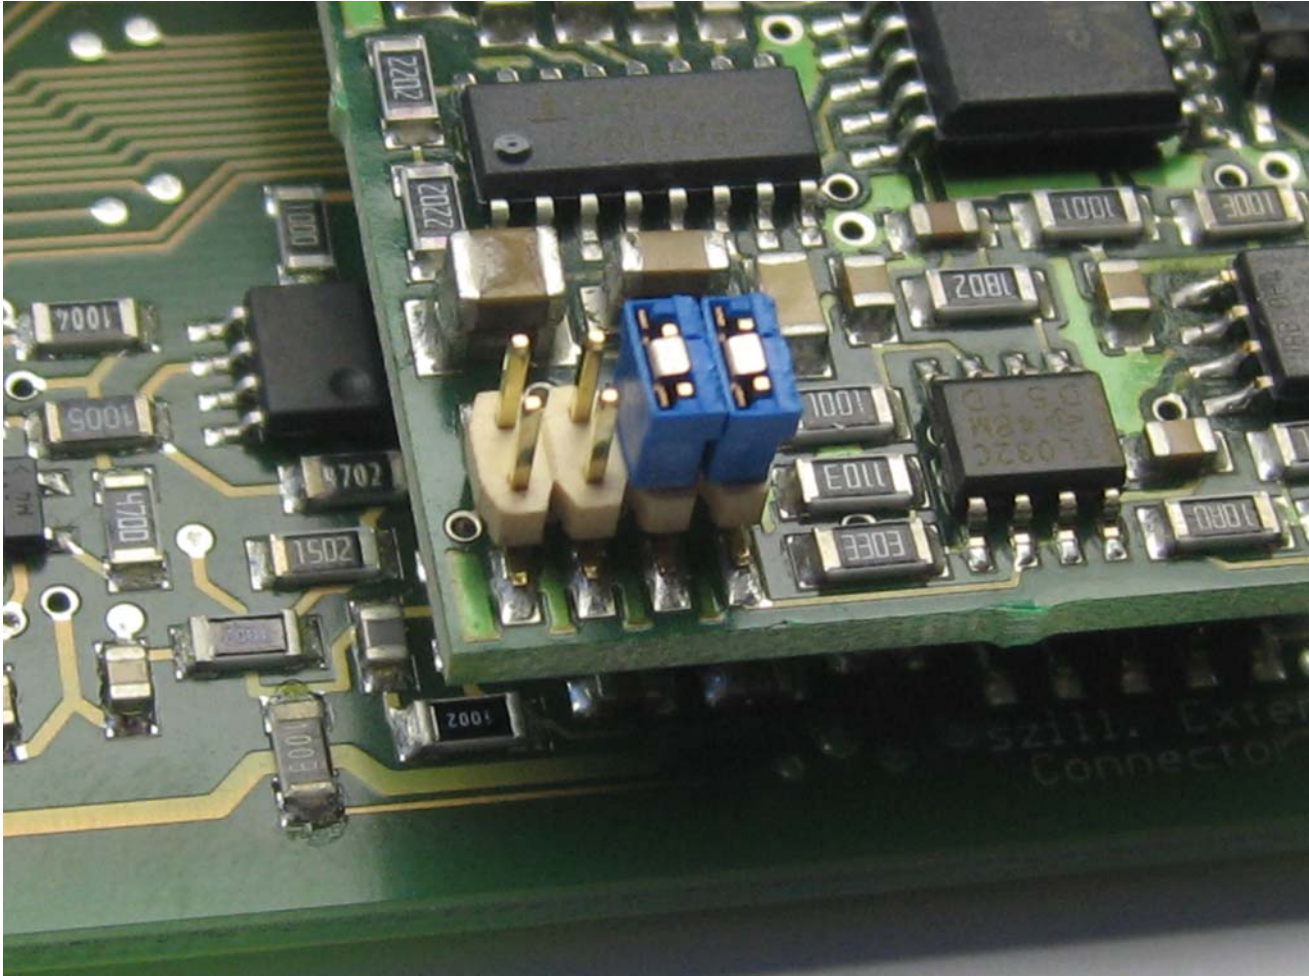

Change of the jumpers on the SOM-1 board:

- jumper 1-2 closed
- jumper 3-4 closed
- all other jumpers open

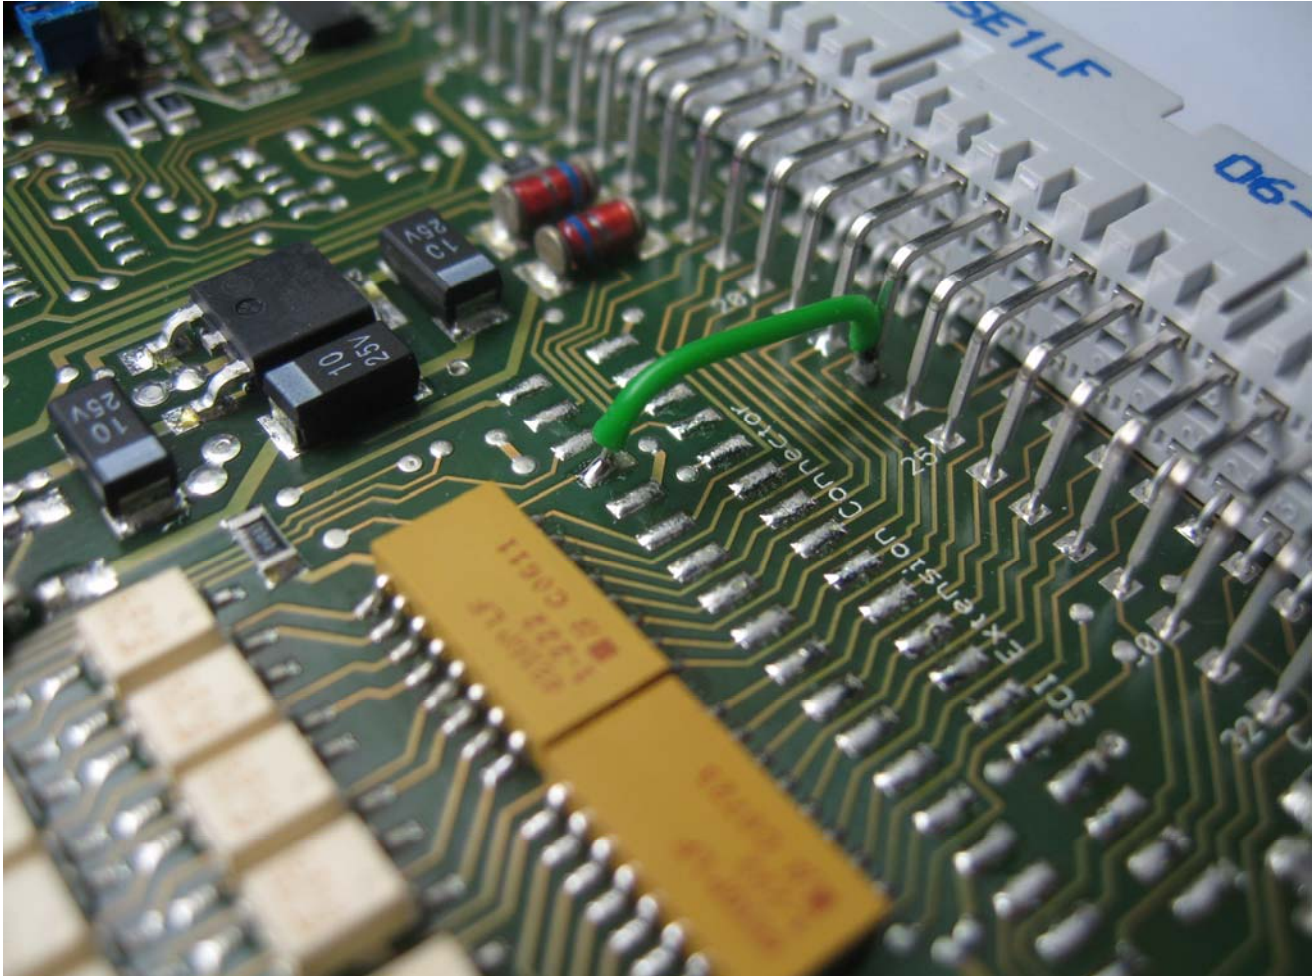

Add a wire between pad 30 of the SCI Extension Connector to pin C23 of the VG64 connector.